



Mk 1 Shootbolt Espagnolette Extension Pieces

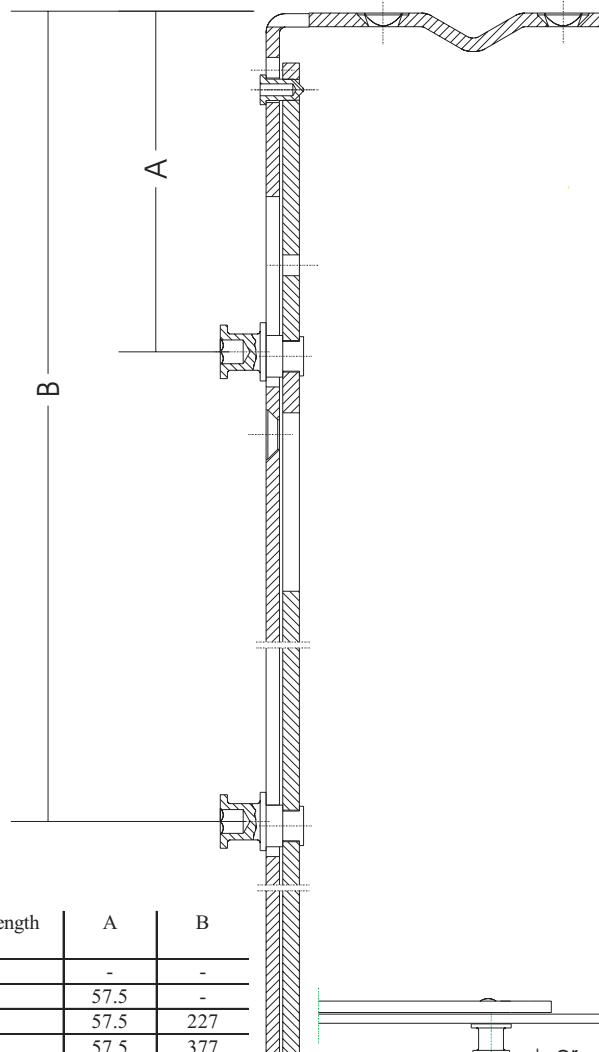


MACO Espagnolette
Fittings




Date: 12.10.00

Size	Faceplate Length (mm)	A	B
Gr. 0	131.8	-	-
Gr. 1	356	57.5	-
Gr. 2	492	57.5	227
Gr. 3	642	57.5	377

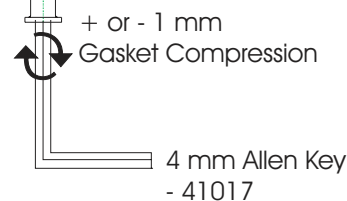


Size	Sash Reabate Size (mm)	Mushrooms Per Extension	 7.7 Yellow	 7.7 Silver	 9.0 Yellow	 9.0 Silver	 10.5 Yellow	 10.5 Silver
PVC-U								
Gr. 0	320 - 400	-	28215	58177	28215	58177	28215	58177
Gr. 1	401 - 800	1	28610	58160	28611	58161	50916	58157
Gr. 2	801 - 1100	2	28612	58162	28613	58163	50917	58158
Gr. 3	1101 - 1400	2	28614	58164	28615	58165	50918	58159
-	250 mm Extension Piece	1	10194	11804	10195	101530	-	-
-	400-600 mm Extension Piece	1	206436	206508	206437	206509	-	-
Timber								
Gr. 0	320 - 400	-	52800	58170	52800	58170	52800	58170
Gr. 1	401 - 800	1	52801	58171	52804	58174	-	-
Gr. 2	801 - 1100	2	52802	58172	52805	58175	-	-
Gr. 3	1101 - 1400	2	52803	57173	52806	58176	-	-
-	250 mm Extension Piece	1	10194	11804	10195	101530	-	-
-	400-600 mm Extension Piece	1	206436	206508	206437	206509	-	-


Mk 1 Shootbolt Espagnolette Extension Pieces

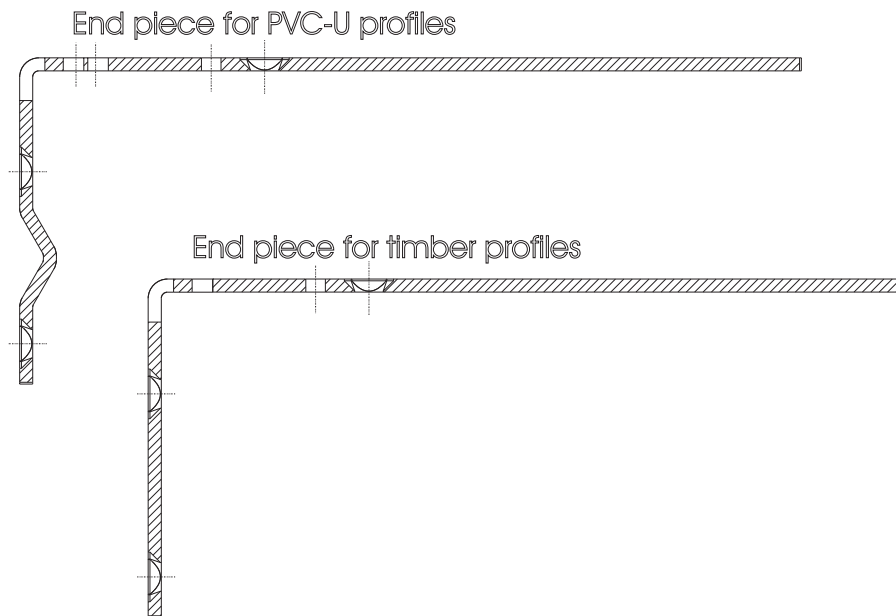



The bolt throw is adjusted by moving the mushroom bolt before cropping to size



Locate the extension into the corner of the sash and crop to size



Locate the shootbolt and mushroom striker plate together and position into the corner of the frame.

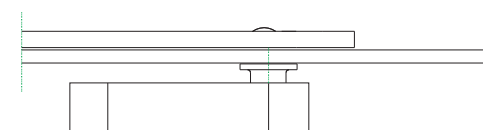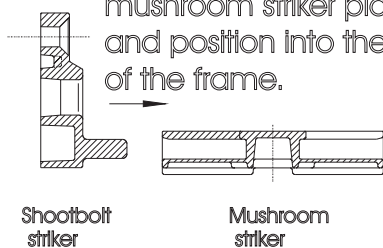

Align the center of the mushroom with the location mark on the striker when the espagnolette is in the locked position