


1. FIT LOCK ON SLIDING PANEL - (HOOK RETRACTED)
2. POSITION ADAPTOR ON LOCK.(DRIVE PEG LOCATES IN ROD)
3. OFFER SHOOT BOLT TO EDGE OF DOOR AND END OF SERRATION SLOT. MARK AND CUT TO SIZE (SQUARE CUT)
4. LOCATE IN SERRATION AND FIX SHOOT ROD.
5. LOCATE COVER AND FIX.
6. LOCATE END GUIDE AND FIX.
7. OPERATE LOCK TO CHECK SHOOT BOLT.

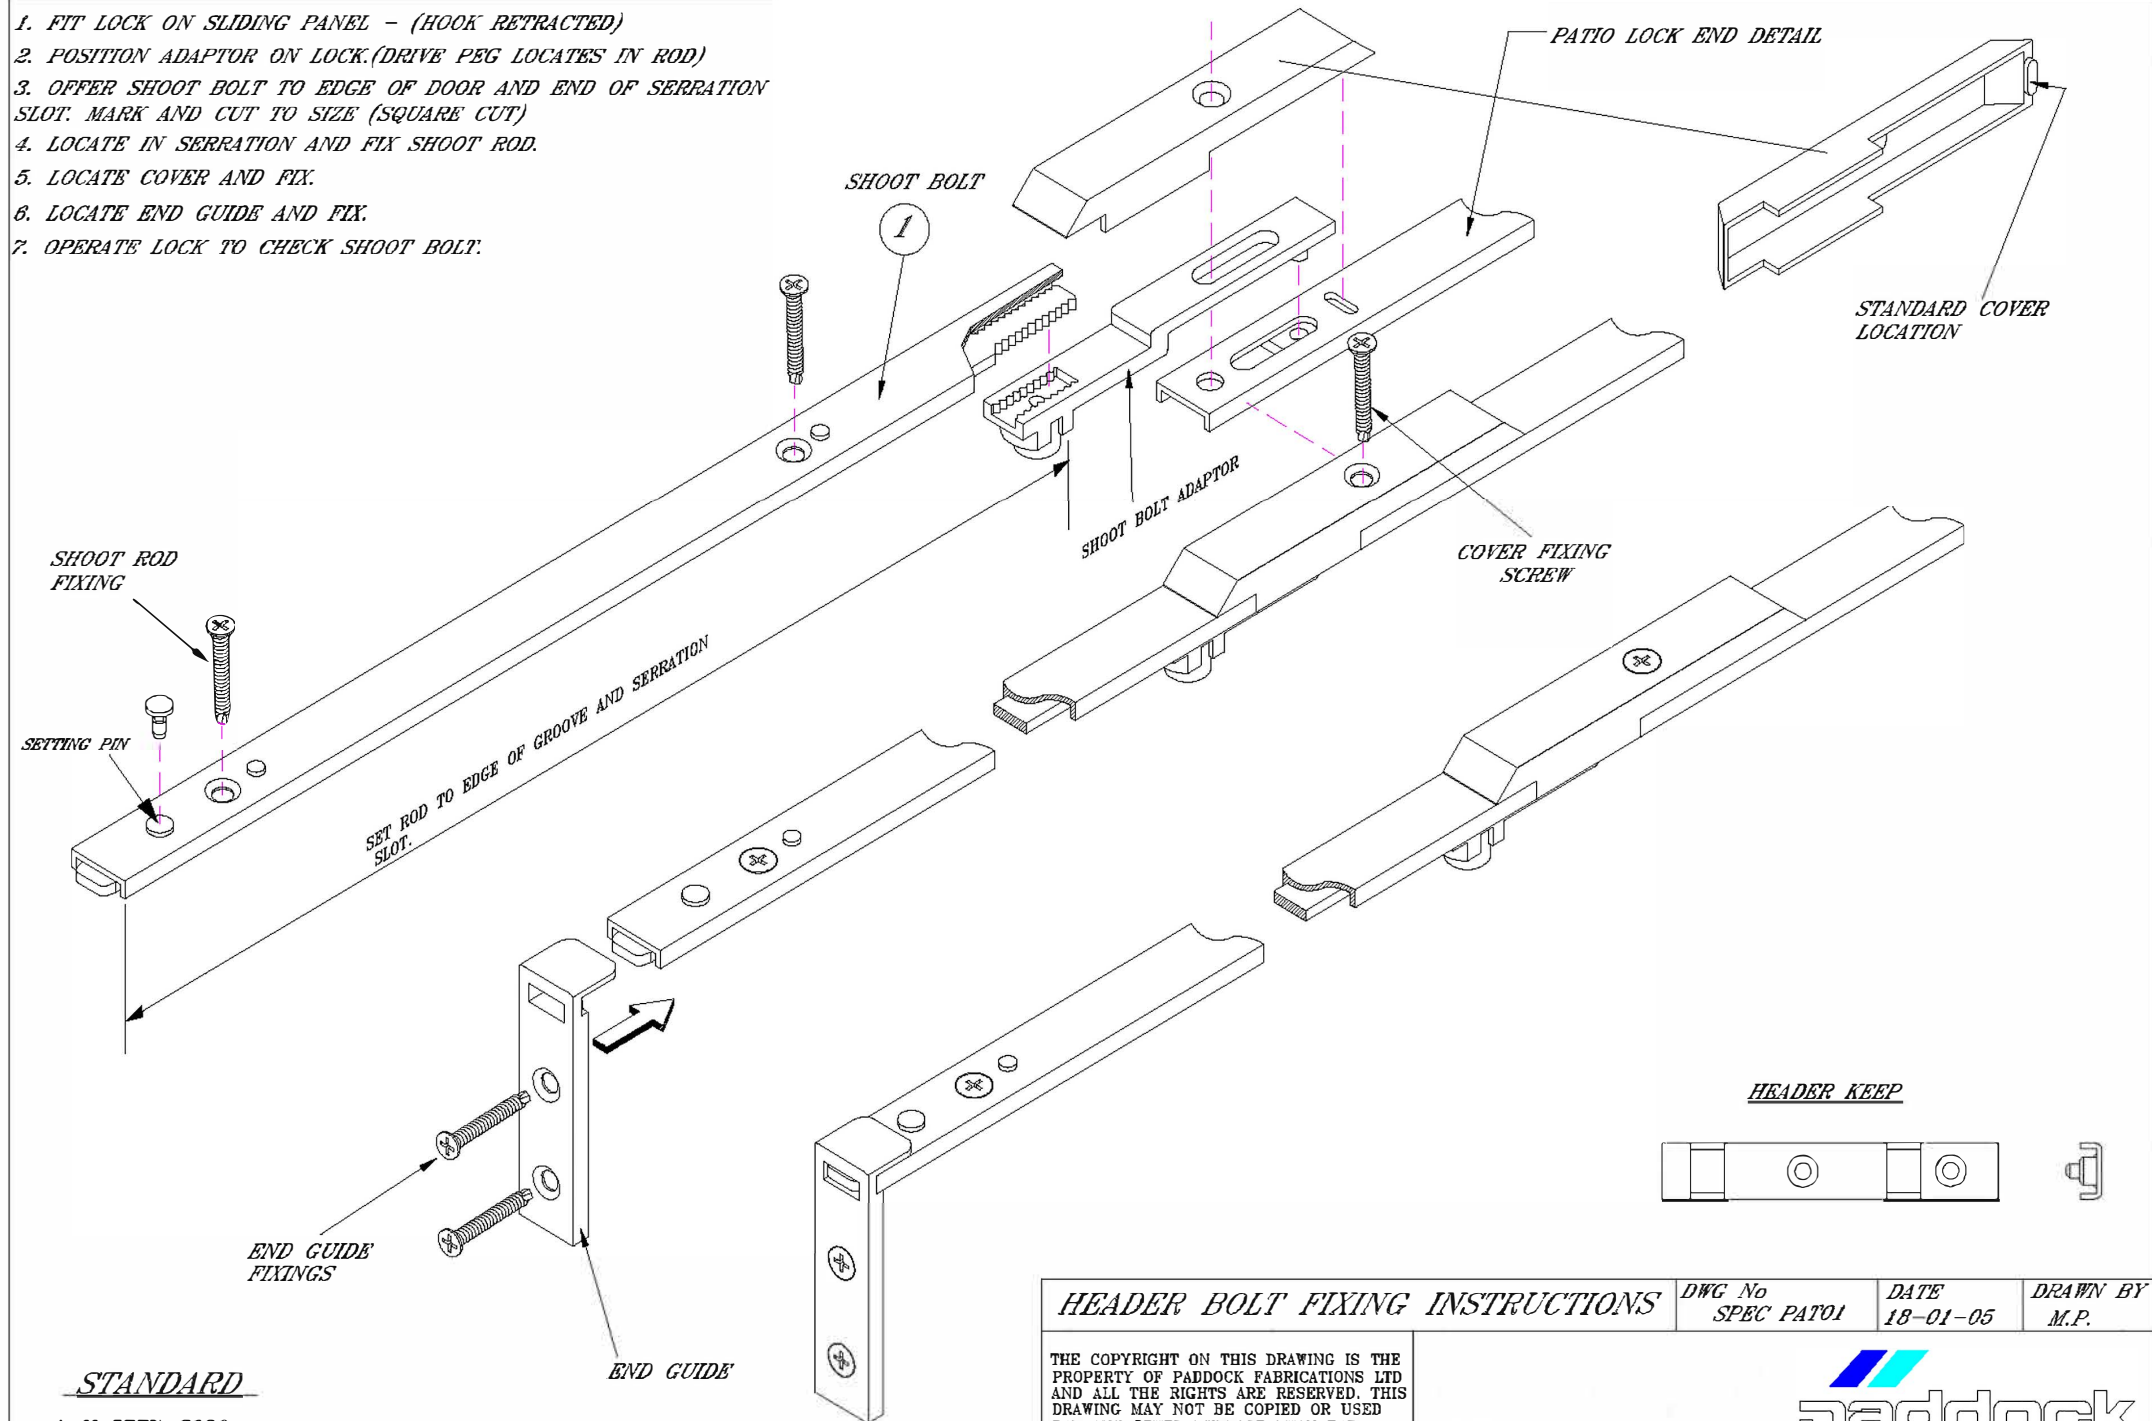

STANDARD

1off 5777-C026  
PER PATIO LOCK

### HEADER BOLT FIXING INSTRUCTIONS

DWG No  
SPEC PAT01

DATE  
18-01-05

DRAWN BY  
M.P.

THE COPYRIGHT ON THIS DRAWING IS THE PROPERTY OF PADDOCK FABRICATIONS LTD AND ALL THE RIGHTS ARE RESERVED. THIS DRAWING MAY NOT BE COPIED OR USED FOR ANY OTHER PURPOSE THAN FOR WHICH IT WAS SUPPLIED.

**paddock**