

**Replace the lock,
not your whole door.
Genius.**

Universal

Replacement PVCu Door Lock

Yale[®] Doormaster[™]

Yale Doormaster™ Universal Replacement lock for PVCu Doors

Yale Doormaster™ Universal is designed to replace any PVCu door lock with a 35mm or 45mm backset and a 16mm faceplate. Simple to fit, Doormaster™ Universal uses the latest patented technology from Yale to ensure security and simplicity of installation.

Easy to install

Yale Doormaster™ Universal has been designed to make installation as simple as possible for both the professional and DIY user.

16mm faceplate

Suitable for
PVCu doors

Fixing tabs

Make fitting easy and
more secure.

Uni-packer™ System

A one piece keep with our patented Uni-packer™ system is included, pre-assembled for fast, easy, and reliable installation.

Split follower for nightlatch function

Optional feature that will
automatically lock the door
behind you as you leave.

Latest YS170 centre gearbox

The latest engineering
from Yale.

Latch Easily Reversible

Makes this lock
suitable for left or
right-handed doors.

Central Hook

Provides protection
against attack,
preventing separation.

Backset Availability

Yale Doormaster™ Universal
is available in 35mm
or 45mm backset

Rounded ends

Makes handling and
installation safer.

1-piece Mushroom Rollers

Easy to adjust for smooth
operation, helping to
prevent separation.

1-piece Rollers

Easy to adjust to create a
weather-tight seal.
(Allen key included.)



Guaranteed peace of mind

Yale Doormaster™ Universal is backed by the reputation of Yale, the world's favourite lock since 1843 – and comes with a full 10 year guarantee.

Find out more about Yale Doormaster™ by
visiting windowware.co.uk

Will Yale Doormaster™ Universal fit my door?

Yale Doormaster™ Universal has been designed to fit most PVCu Doors, but to be sure it will fit your door just take 3 simple measurements:

1. Measure the backset

Measure the distance **A** between the centre of the cylinder and the metal faceplate of the lock (not the edge of the door).

Yale Doormaster™ Universal replacement locks come in 35mm and 45mm backsets – so if your existing lock is either of those backsets just choose the same size lock.

2. Measure the Centres


Measure the distance between the centre of the cylinder and the centre of the door handle.

B must be 92mm for Yale Doormaster™ Universal to fit your door.

Please note: If the handles inside and outside the door are at different heights, measure the centres on both. If either are 92mm you will be able to fit this lock, but will require new handles – see Yale Replacement PVCu Door Handles.

3. Measure the faceplate

Measure the metal faceplate on your existing lock – this must be 16mm for Yale Doormaster™ universal to fit your door.

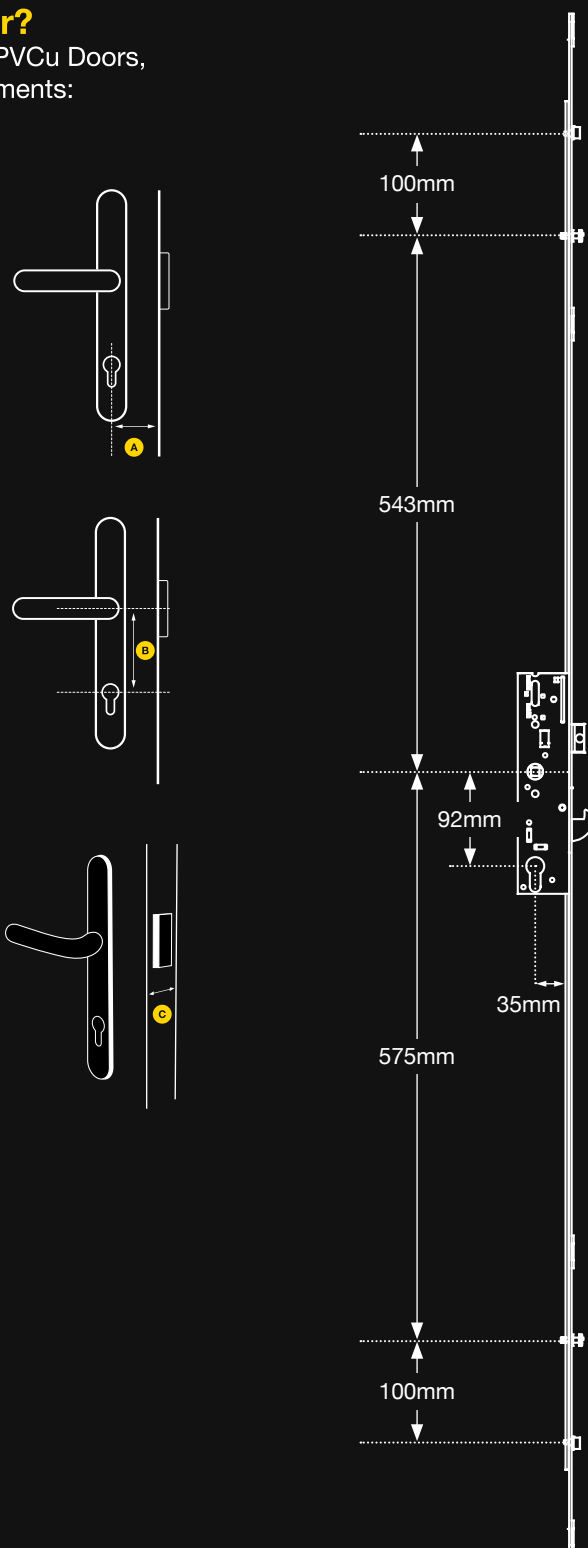

Doormaster™ Universal 11439UNI/12/11
© 2011 ASSA ABLOY Ltd



WINDOW WARE

Established 1987

Window Ware, Telford Way, Cross Park, BEDFORD, MK42 0PQ
Web www.windowware.co.uk
Sales • Tel 01234 242724 • Fax 01234 242700
Email sales@windowware.co.uk
Trade Counter • Tel 01234 242734 • Fax 01234 242735
Email tradecounter@windowware.co.uk