



Conexis® L1 Smart Door Lock 3 Step Compatibility Guide.

1. Centre Measurement
Measure the distance between the centre of the cylinder and the centre of the door handle/spindle. This must be **92mm**.
(We recommend you remove the internal handle for accurate measurements)

 **Critical Measurement**

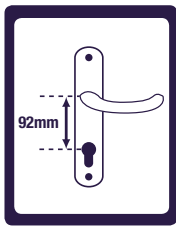


Don't worry if your door doesn't meet all of the above specifications. Please email Yale Consumer Support: Info@Yale.co.uk
(Entering - 'Conexis' in Subject Line)

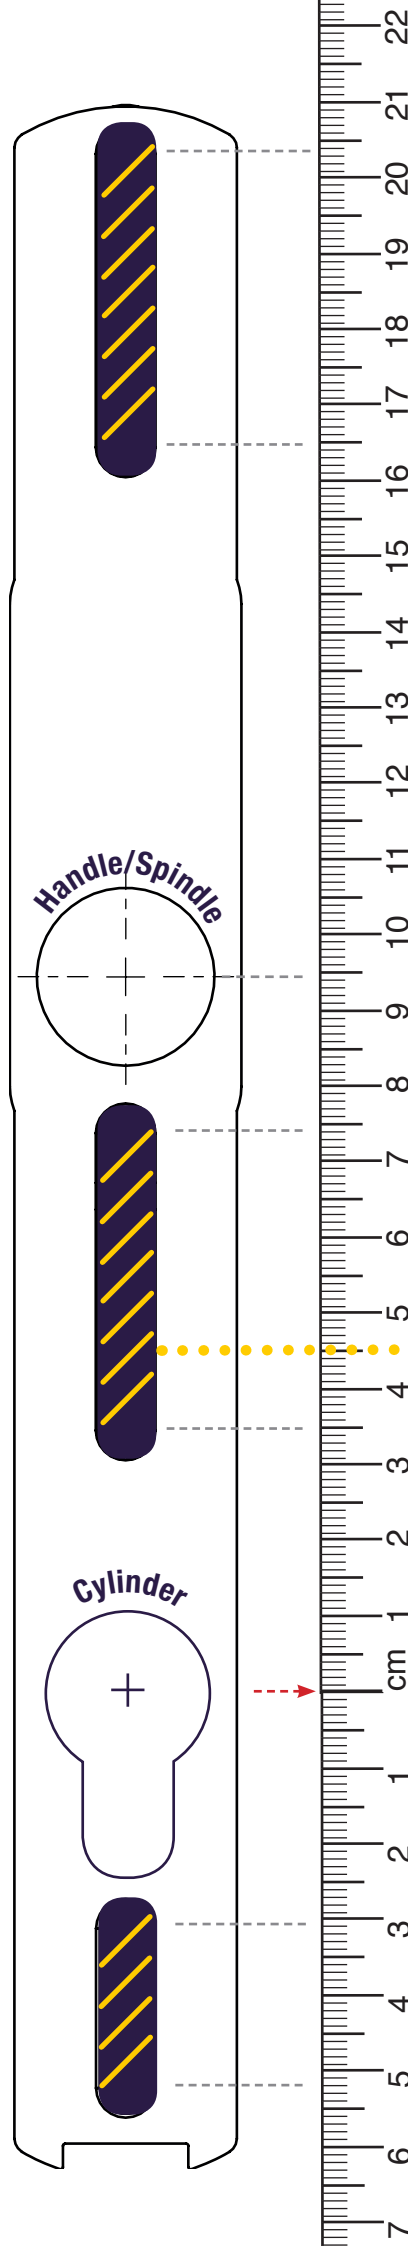

2. Door Thickness
When measuring your door ensure the thickness is between **44-70mm**.

 **Critical Measurement**

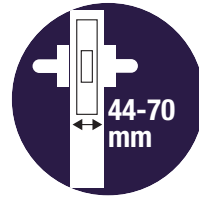

3. Taking the centre of the cylinder as a start point - Ensure at least 2 out of 3 yellow striped zones align with existing screw holes on your door. The **Conexis®L1 Smart Door Lock** is adjustable within these areas.



T | 01234 242724
W | www.windowware.co.uk

Template is Scale 1:1