


Stormguard ICD Rain Deflector Dimensions

Part number:	LTH91***
Description:	Stormguard Rain Deflector Including End Caps
Boxed quantity:	50

**WINDOW
WARE**
We've got it

Stormguard

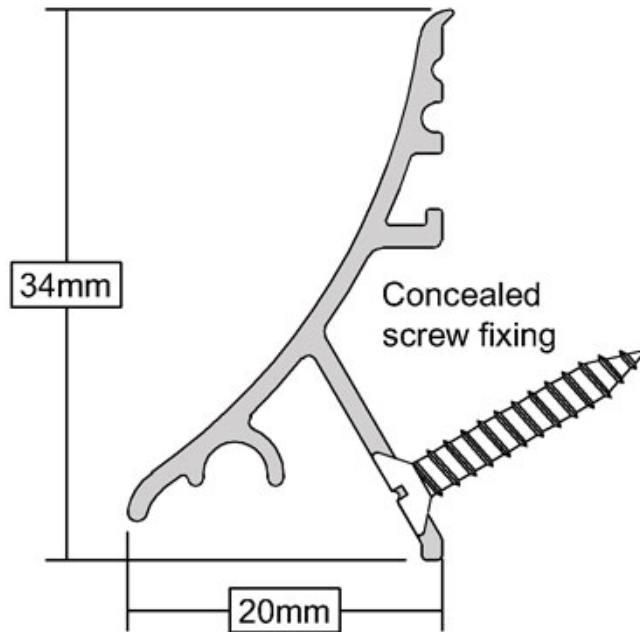

- 1) With the door in the closed position, cut the rain deflector to the width of the door, allowing 3mm clearance on the catch side and an extra 1.5mm on each end for the Edge Covers (6mm shorter than measured width overall).
- 2) Mark the position of the screw holes when the rain deflector clears the threshold sill by 9mm.
- 3) Apply sealant in the sealing grooves of the deflector and screw to the door.
- 4) Apply a blob of sealant to the Edge Covers and push fit onto the ends of the deflector.